# GNSS-UBX/X20P

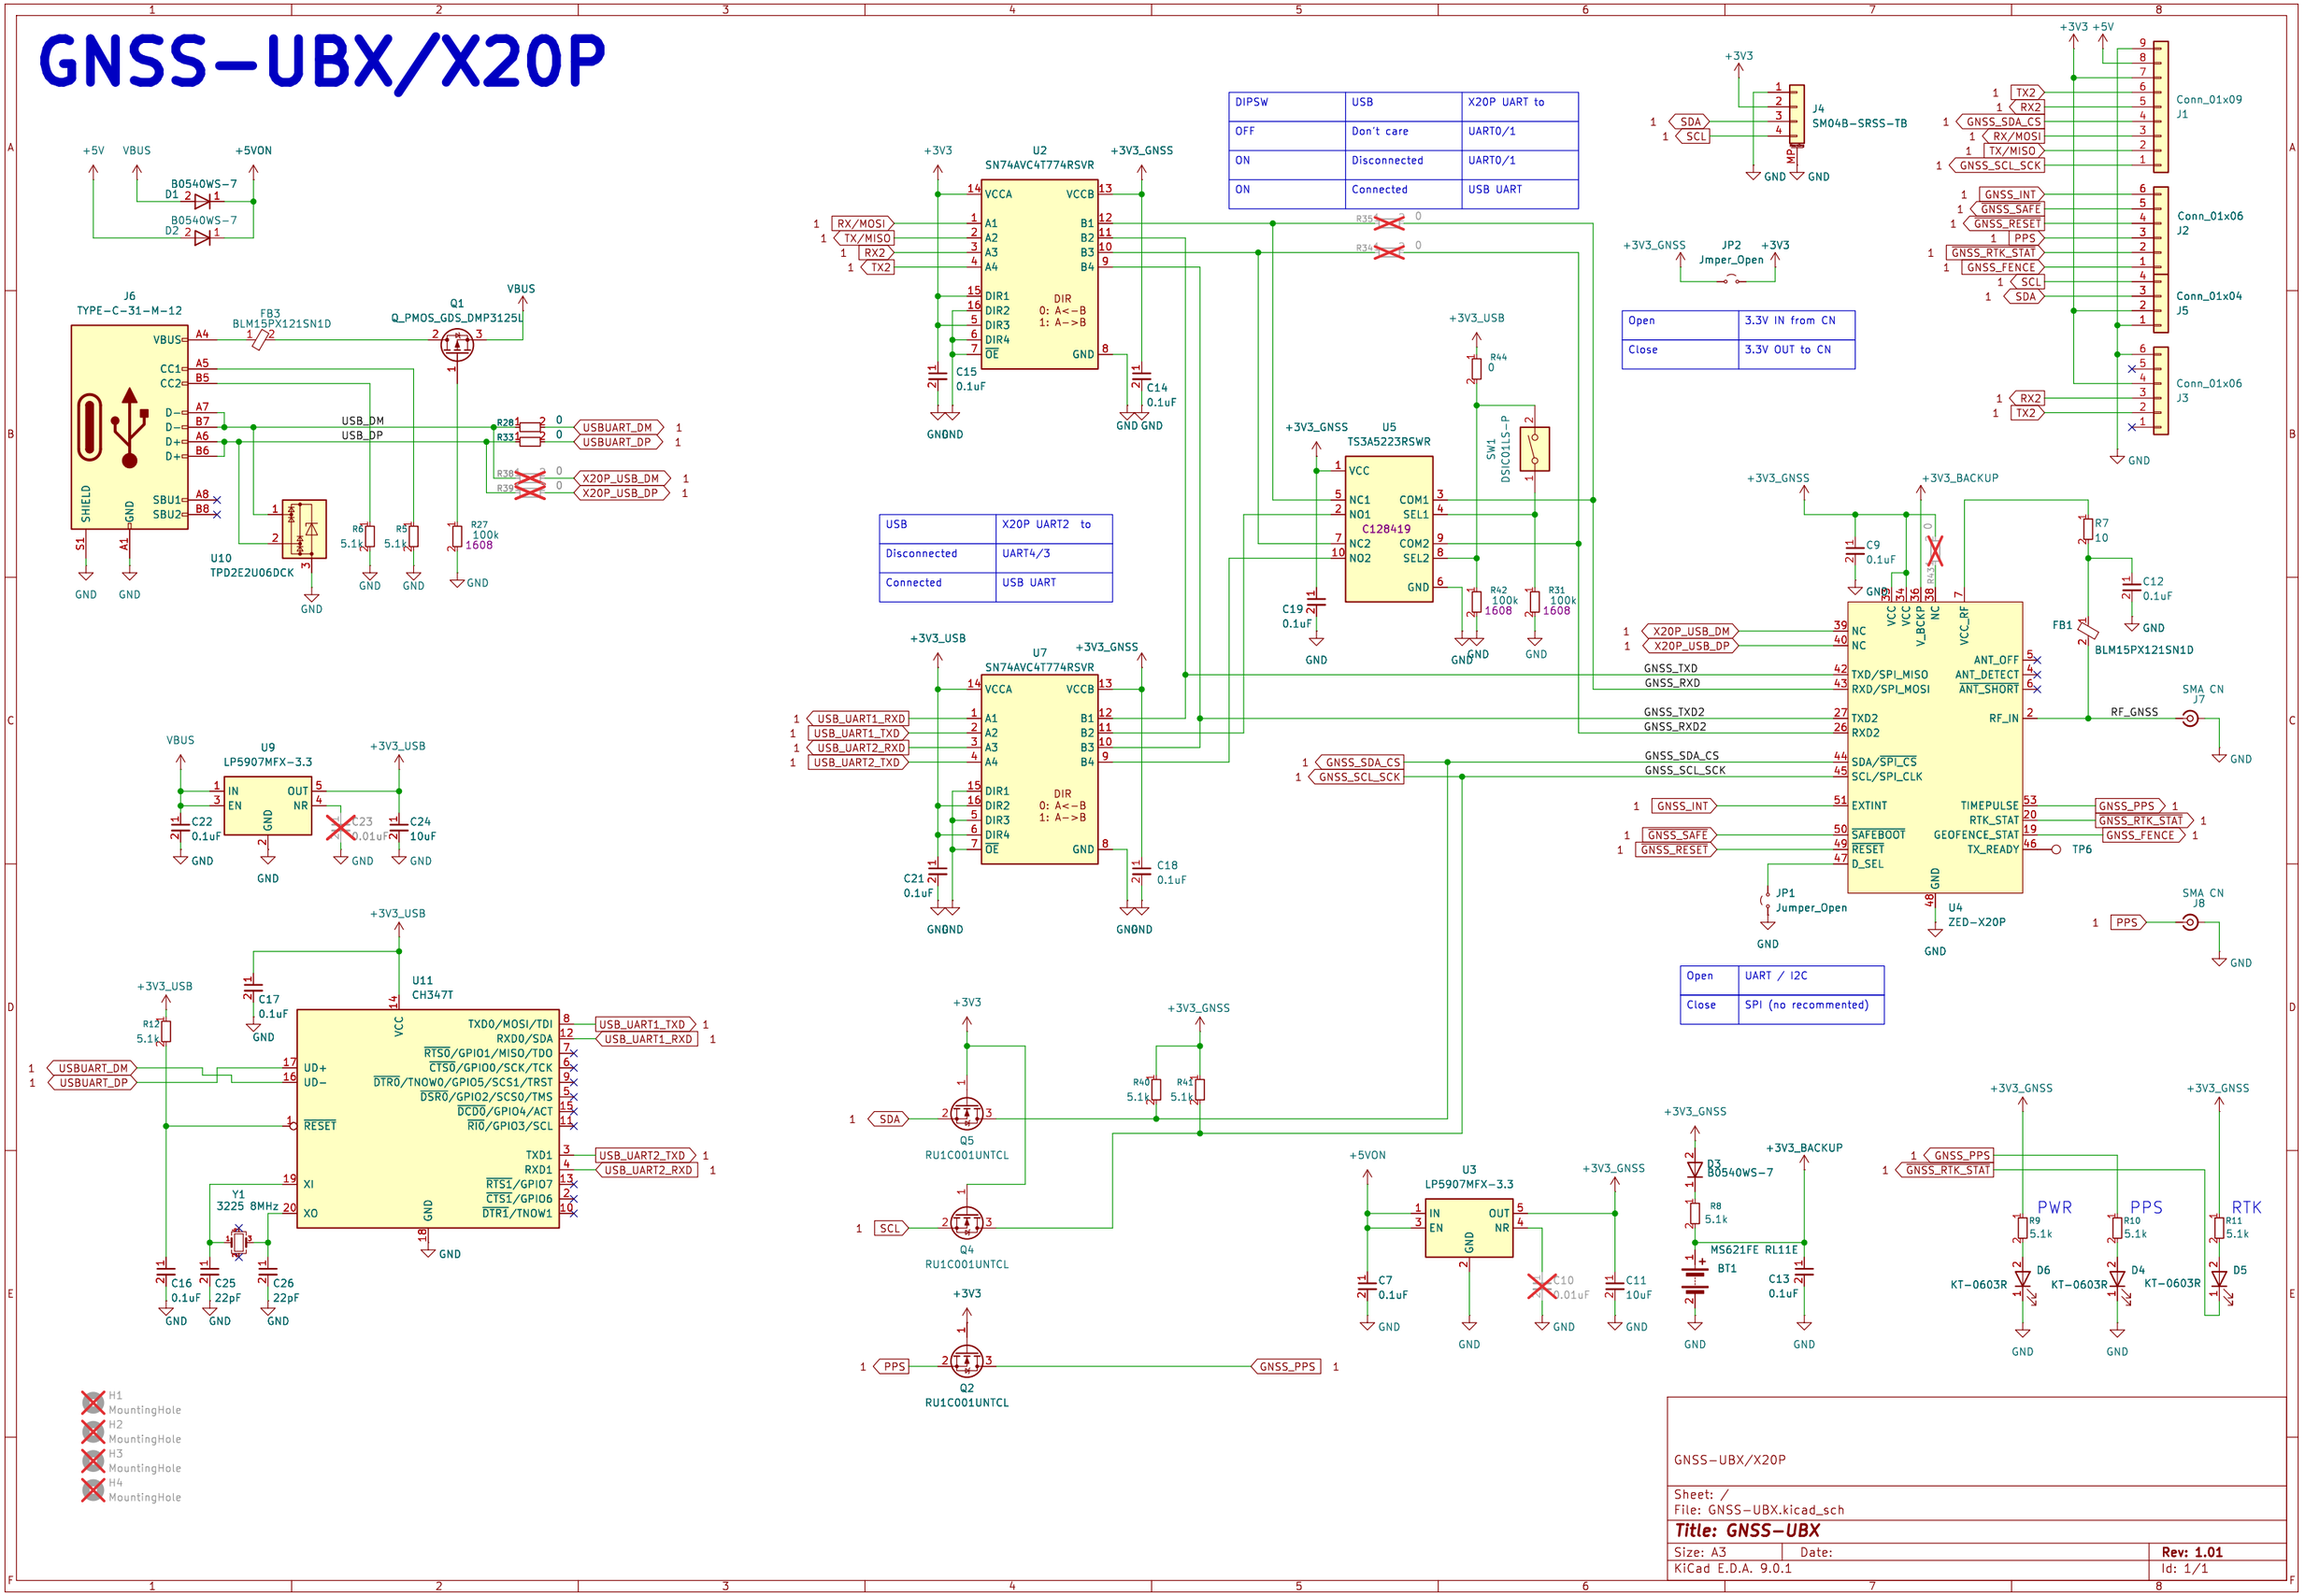


| DIPSW | USB | X20P UART to |
|---|---|---|
| OFF | Don't care | UART0/1 |
| ON | Disconnected | UART0/1 |
| ON | Connected | USB UART |

| USB | X20P UART2 to |
|---|---|
| Disconnected | UART4/3 |
| Connected | USB UART |

| Open | 3.3V IN from CN |
|---|---|
| Close | 3.3V OUT to CN |

| Open | UART / I2C |
|---|---|
| Close | SPI (no recommented) |

GNSS-UBX/X20P

Sheet: /
File: GNSS-UBX.kicad_sch

**Title: GNSS-UBX**

| Size: A3 | Date: | Rev: 1.01 |
|---|---|---|
| KiCad E.D.A. 9.0.1 | | Id: 1/1 |